

Trumpet Maintenance

Before You Play:

Do not consume sugary candy, gum or sodas before playing your instrument.

 
 
Always lay your case flat on the floor before opening and closing your trumpet case.

Lubricate your valves:

1. Unscrew the valve cap and pull the valve out about halfway.
2. Apply 2-3 drops of valve oil to the wide part of the valve.
3. Push the valve back into position, making sure that it is lined up correctly.
4. Depress the valve for about 5 seconds or so to ensure that the oil has properly spread.

To check for proper alignment, gently try to turn the valve. If it doesn't turn it is lined up properly. If it turns, keep turning the valve until you hear a "click" and the valve stops turning.



Also, confirm that the valves have been placed properly by blowing air through your instrument. If your valves aren't properly placed, air will not flow freely through your trumpet.

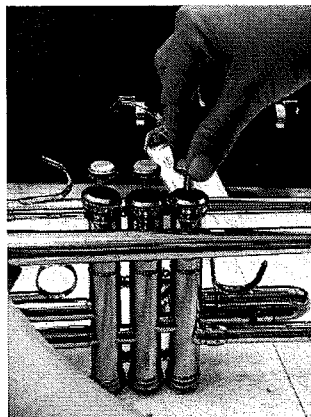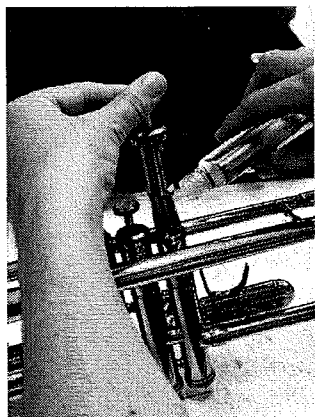

Never force your mouthpiece onto your instrument. If you do, it will most likely get stuck. If this happens, never try to remove it yourself by using force. Instead, bring your instrument to your directors because they will probably have a mouthpiece removal tool. If not, it can be removed quickly and easily by a representative at a local music store.

After You Play:

  Remove excess moisture from inside your instrument by opening the water keys and blowing through the instrument.

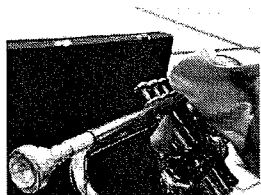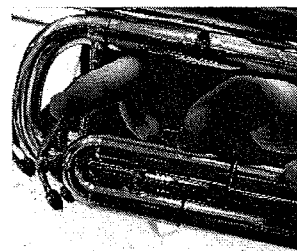


Then, wipe down the outside of the trumpet with a clean, soft cloth to remove oils and perspiration. This will keep it from tarnishing.

Storage:

Always leave your trumpet placed properly in its case when it is not being used. Never leave it on the ground, a chair or a music stand. Always keep it in your hands or in its case.

Do not put music and other items in your case unless there is a space or compartment designed for it. Loose items can damage your instrument and case. Make sure to keep the mouthpiece in its special compartment.

 
Never store your trumpet in extreme hot or cold temperatures. Extreme temperatures can damage your instrument.

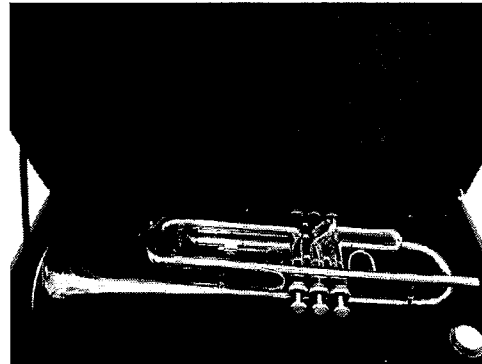

When carrying your trumpet, double check that the latches are closed securely. It is a good idea to carry the LID of the case against your leg.




Weekly Maintenance:

 Clean out your mouthpiece weekly with soft liquid soap, warm water and a mouthpiece brush.

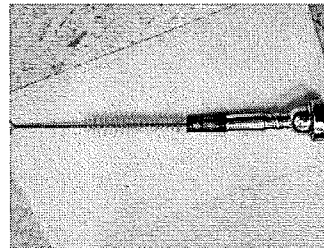

Monthly Maintenance:

   - Pull valves out completely, wipe off old excess oil and residue. Apply 4-5 drops of oil again as shown previously.
- Check to make sure that slides move freely and lubricate them if they are difficult to move. To do this, pull out the slide and wipe it with a soft cloth to remove any residue. Afterward, rub a small amount of slide grease on it and carefully insert the slide back into your instrument. Here are some pictures of the process:

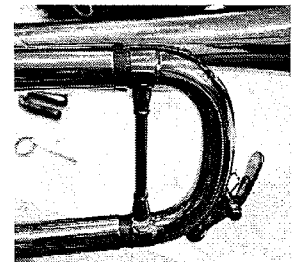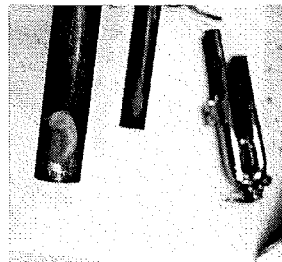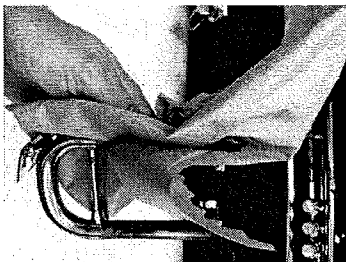

- The inside of your trumpet should be thoroughly cleaned every few months in lukewarm water- NEVER hot water. Your teacher will give you specific instructions on how to give your instrument a deep cleaning at home.

Annual Maintenance:

If you own your instrument, summer is a great time to take your trumpet to a local music store for an annual check-up. Yes, musical instruments need "check-ups" too! The store will do minor repairs if needed and do a thorough chemical cleaning of your instrument. If you are renting, this maintenance is usually covered in the rental program.

